



**Part Number:** CAI-MT001B, CAI-MT001R

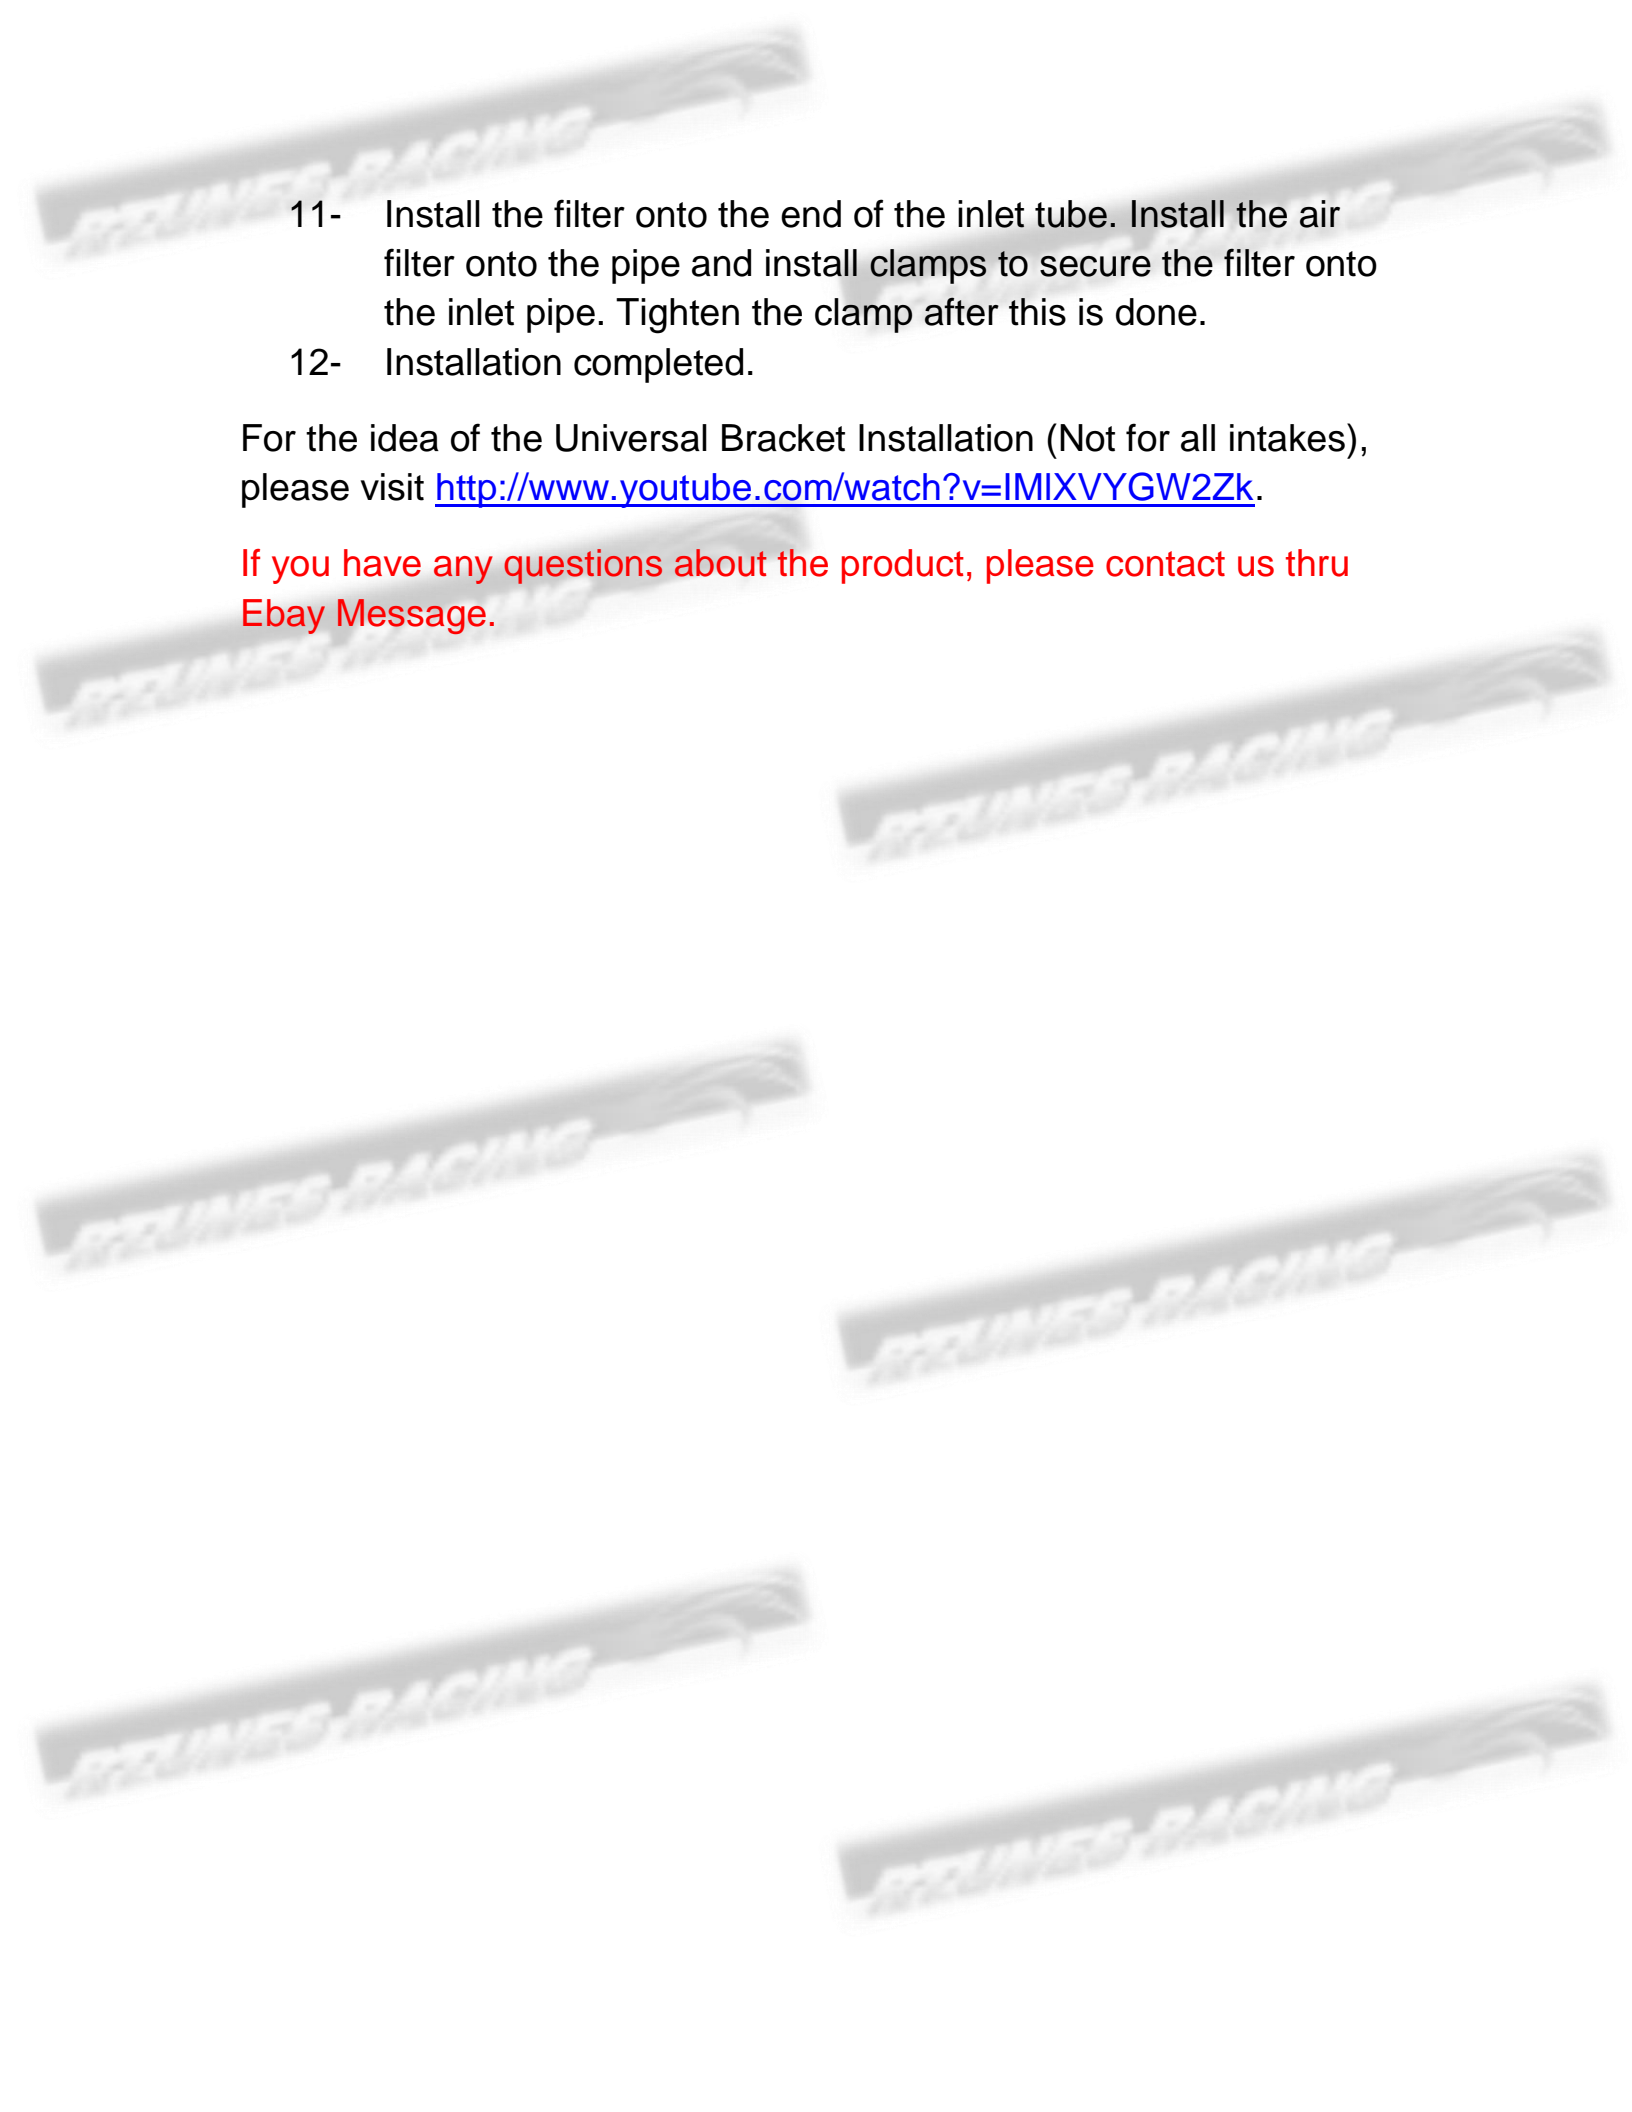


Part List:

Cold air intake pipe	2 Pieces
Coupler	2 Pieces
Clamp	5 Pieces
Rubber hose	1 Pieces
Air filter	1 Piece
Universal bracket	1 Set

**Note:** Disconnect the negative battery terminal before starting this installation. The installation of this cold air intake does require mechanical skills. Driver-side mud guard might need to be removed.

- 1- Disconnect the breather hose from the cam cover.
- 2- If any hoses are inadvertently disconnected during this installation re-connect them right away to avoid loose hoses later.
- 3- Loosen and remove the inlet hose between the throttle body and the air filter box.
- 4- Remove the air filter box from the vehicle including the attaching hardware.
- 5- The inlet to the air filter box is on the opposite side of the air filter. It is a tube whose inlet is downward and is pointed downwards. Removing the air filter assembly exposes a cavity inside the fender well. The air intake for the cold air system will reside within the cavity left open by the removal of the stock system. This allows access to cooler air.
- 6- When installing the intake system, do not completely tighten the clamps or mounting hardware until instructed to do so.  
NOTE: Removal of the battery will ease installation.
- 7- Install a coupler on the throttle body end of the L-shape cold air intake pipe. The end of the pipe closest to the hose fitting attaches to the throttle body. Do not tighten the clamp but adjust it so that the pipe will not fall off but can also rotate on the throttle body.
- 8- Install the remaining coupler over the other end of the Cold air intake pipe (L-shape) and use two clamps. Do not tighten the clamp on the pipe at this point.
- 9- The free end of the pipe should be underneath and pointed toward the fender well. On some models, you may have to loosen the bolt holding the horn in place and rotate the horn to clear the pipe.
- 10- At this point the entire intake tube can be adjusted for position and alignment. Make sure that the tube does not rub anywhere along its length. Install the universal bracket. Please click on the link below for getting more idea about how to install it.

- 
- 11- Install the filter onto the end of the inlet tube. Install the air filter onto the pipe and install clamps to secure the filter onto the inlet pipe. Tighten the clamp after this is done.
  - 12- Installation completed.

For the idea of the Universal Bracket Installation (Not for all intakes), please visit <http://www.youtube.com/watch?v=IMIXVYGW2Zk>.

If you have any questions about the product, please contact us thru Ebay Message.