


**RTUNES RACING**



**Part Number:** SI-CH007B, SI-CH007R

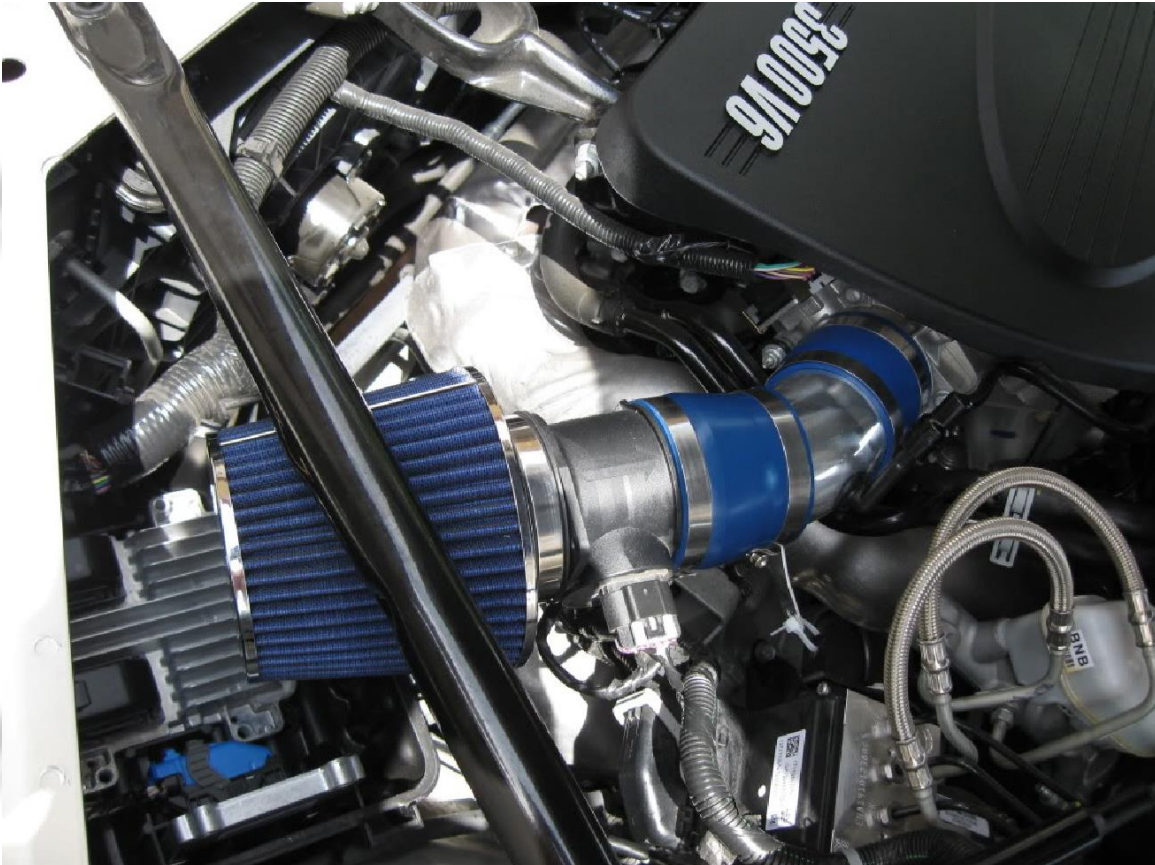

**Part List:**

Air intake pipe	1 Piece
Coupler	2 Pieces
Clamp	5 Pieces
Air filter	1 Piece
Universal bracket	1 Set

**Note:** Disconnecting the negative battery terminal before starting this installation. The installation of this air intake does require mechanical skills.

- 1- Remove your stock intake section from air box to the throttle body.
- 2- Retain the MAF sensor with the housing that is located before the air box to be used later.
- 3- Connect the air intake with provided clamps like the above picture.
- 4- Connect the MAF sensor to the open end of the coupler.
- 5- Finally, connect the air filter to the other side of the MAF sensor housing.
- 6- Reposition the ECM with the provided zip ties.
- 7- Once finish the installation, reset the ECU by disconnects the battery for 10 mins, or you can perform this step before you start the installation.
- 8- Align the entire intake for best fit making sure there is no rubbing anywhere along the length of the intake. Tighten all the clamps.
- 9- Installation completed.

For the idea of the Universal Bracket Installation (Not for all intakes), please visit <http://www.youtube.com/watch?v=IMIXVYGW2Zk>.

**If you have any questions about the product, please contact us thru Ebay Message.**